DB98-28379A.indd 1 2010-03-16 8:00:33

Safety Precautions

The following safety precautions must be taken when using your air conditioner.

WARNING

Risk of electric shock. • Can cause injury or death. • Disconnect all remote electric power supplies before servicing, installing or cleaning. • This must be done by the manufacturer or its service agent or a similar qualified person in order to avoid a hazard.

DURING OPERATION

- Users of this product are cautioned not to attempt repair of this product at their own discretion. Instead, they are requested to directly contact a designated service center or the outlet at which the product was purchased.
- Never spill any kind of liquid into the unit. Should this happen, unplug or main switch off the unit and contact an authorized service center.
- Do not insert anything between the air outlet blades because the inner fan may be damaged and could cause injury. Keep children away from the unit.
- Do not place any obstacles in front of the unit.
- Do not spray liquid of any kind into the indoor unit. Should this happen, switch off the breaker used for your air conditioner and contact your installation specialist.
- Make sure that the unit is correctly ventilated at all times: Do not place clothing or other materials over it.
- If the wireless remote control will not be used for a long time, remove the batteries. (If applicable)
- When using a wireless remote control, the distance should not be more than 7 meters from the air conditioner. (If applicable)
- The air conditioner must be plugged into its own specific power source, which must be installed in compliance with national wiring,earthing and safety regulations.
- If the power cord is damaged in any way, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- This device must be installed according to the national electrical rules.
- The appliance must be installation that the plug should be easily accessible after installation.
- If the fuse on PC board is broken please change it with the type of T 3.15A 250V.
- The breaker of the air conditioner should be all-pole switch; and the distance between its two contacts should be no less than 3.5mm. Such means for disconnection must be incorporation in the fixed wiring.

DISPOSING OF THE UNIT

- Before throwing out the device, it is necessary to pull back the battery cells and get rid of them safely for recycling reasons.
- When you need to dispose of the unit, consult your dealer. If pipes are removed incorrectly, refrigerant may blow out and come into contact with your skin,causing injury. Releasing refrigerant into the atmosphere also damages the environments.
- Please recycle or dispose of the packaging material for this product in an environmentally responsible manner.

OTHERS

- Never store or ship the air conditioner upside down or sideways to avoid damage to the compressor.
- The appliance is not intended for use by young children or infirm persons without supervision: Young children should be supervised to ensure that they do not play with the appliance.
- Max current is measured according to IEC standard for safety and current is measured according to ISO standard for energy efficiency.

DB98-28379A.indd 2 2010-03-16 8:00:34

Contents

- PREPARING YOUR AIR CONDITIONER
  - Safety Precautions 2
  - Air Conditioning Unit-Main Parts and Control Panel 4
  - Getting Started 5
- OPERATION YOUR AIR CONDITIONER
  - Cooling Your Room 6
  - Airing Your Room 7
  - Switching the Air Conditioner Off 7
  - Adjusting the Air Flow Direction Horizontally 8
  - Adjusting the Air Flow Direction Vertically 8
- RECOMMENDATIONS FOR USE
  - Operating Recommendation 9
  - Temperature and Humidity Ranges 9
  - Cleaning Your Air Conditioner 10
  - Solving Common Problems 11
- METHOD OF INSTALLATION 12

DB98-28379A.indd 3 2010-03-16 8:00:34

Air Conditioning Unit - Main Parts and Control Panel

❋ The design and shape are subject to change, depending on the model.

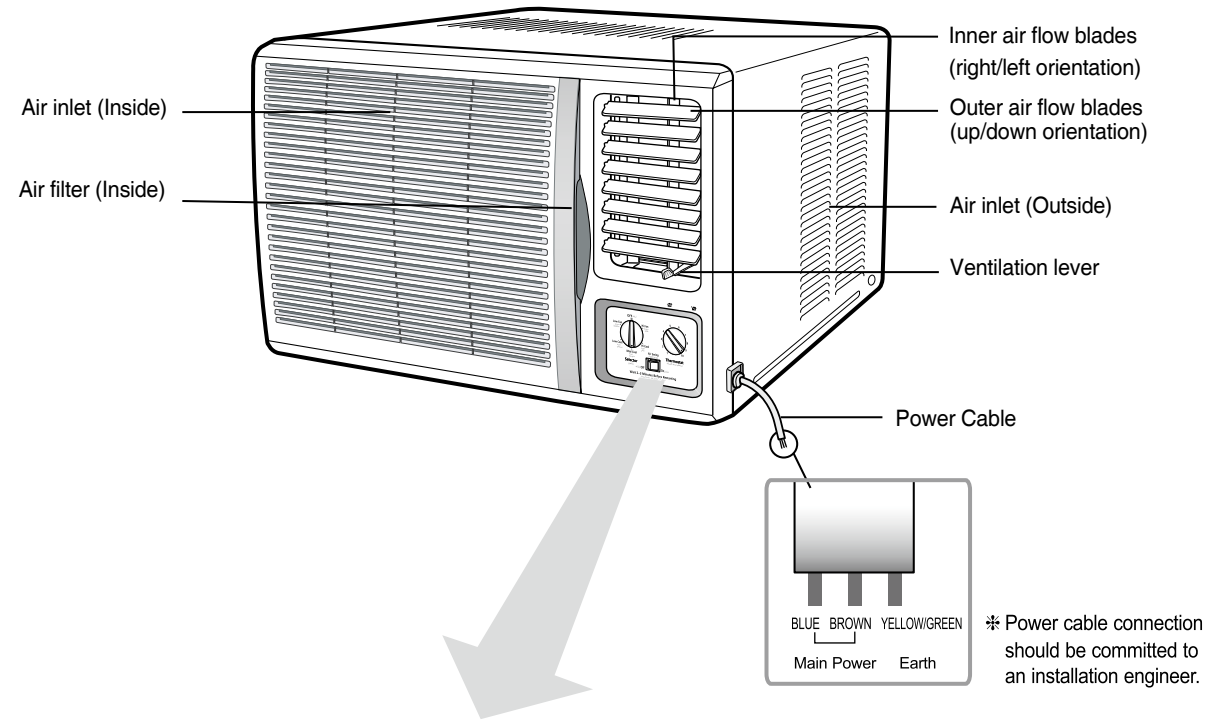

❋ Power cable connection should be committed to an installation engineer.

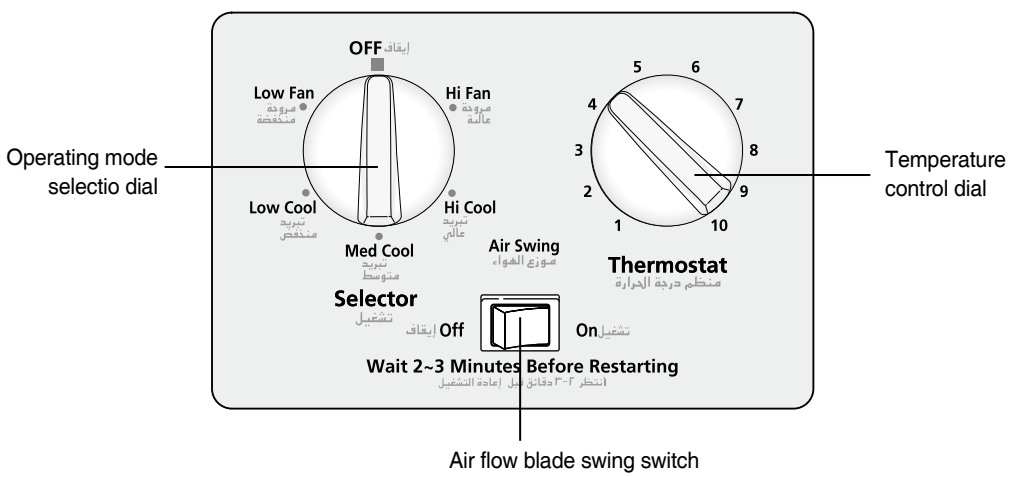

Operating mode selectio dial

Temperature control dial

Air flow blade swing switch

DB98-28379A.indd 4 2010-03-16 8:00:34

Getting Started

You have just purchased a window-type room air conditioner and it has been installed by your installation specialist.

Your Owenr's Instructions contain much valuable information on using your air conditioner. Please take the time to read them as they will help you take full advantage of the unit's features.

The booklet is organized as follows.

- ***The illustration on page 4 shows the air conditioning unit; it indicates the location and purpose of the main parts and controls on the unit.***
- ***In the manual, you will find a series of step-by-step procedures for each function available.***

The illustrations in the step-by-step procedures use four different symbols:

PRESS	**PUSH**	**IMPORTANT**	**NOTE**

DB98-28379A.indd 5 2010-03-16 8:00:35

Cooling Your Room

You must select the Cool mode if you wish to lower the temperature in your room.You can also set the fan speed.

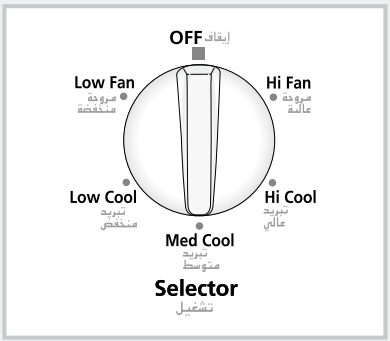

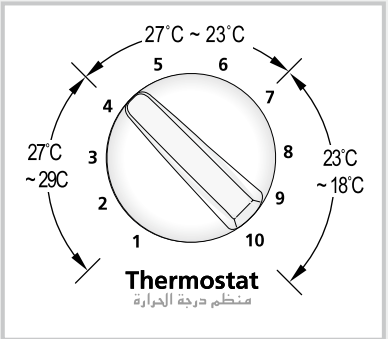

1 Select the operating mode and fan speed.

To cool your room with a...	Set the operating mode selection dial to...
High fan speed	HI COOL
Med fan speed	MED COOL
Low fan speed	LOW COOL

Result:
- ◆ The air conditioner starts up in the Cool mode.
- ◆ The fan starts up at the speed selected.

➢ You can change modes at any time.

2 To adjust the temperature, turn the temperature control dial to the desired position.

Possible temperatures: Between 18°C and 29°C inclusive.

Result: The air conditioner is started cooling if room temperature is higher than selected temperature.

3 To control the direction of the air flow, refer to page 8.

DB98-28379A.indd 6 2010-03-16 8:00:35

Airing Your Room

If the atmosphere in your room is stale, you can air it using the Fan feature and if necessary, evacuate the stale air outside.

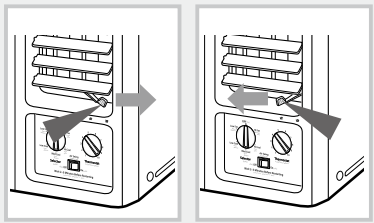

1 If you wish to evacuate stale air outside, push the ventilation lever on the front of the unit to the right and the open position (⌂).

Result: The air inside the room circulates and stale air is evacuated outside.

Otherwise, push the ventilation lever to the left and the closed position (⌂).

Result: The air simply circulates inside the room.

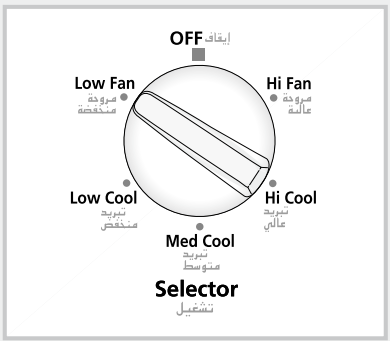

2 Set the operating mode selection dial to the HI FAN or LOW FAN position.

➢ HI FAN: The fan turns high speed.
LOW FAN: The fan turns low speed.

Result: The air conditioner starts up in Fan mode.

3 To control the direction of the air flow, refer to page 8.

Switching the Air Conditioner Off

You can switch the air conditioner off whenever you want.

1 To switch the unit off, simply set the operating mode selection dial to the OFF position.

Result: The air conditioner stops operating.

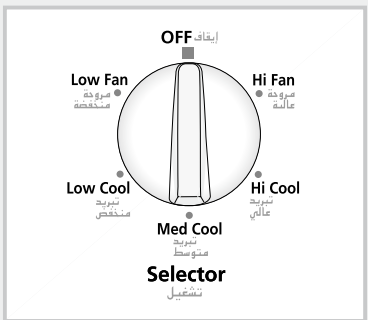

DB98-28379A.indd 7 2010-03-16 8:00:37

Adjusting the Air Flow Direction Horizontally

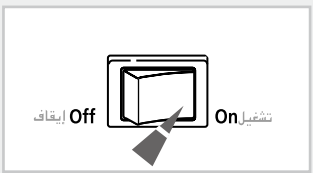

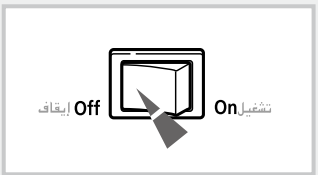

Depending on the position of the unit in your room, you can adjust the orientation of the inner air flow blades on the right-hand side of the unit, thus increasing the efficiency of the air conditioner.

1 Set the air flow blade swing switch to the **on** position.

Result: The inner blades swing automatically left and right.

2 To stop the blades moving left and right, set the air flow blade swing switch to the **off** position.

➢ To stop the blades in a specific position and orient the air flow in the corresponding direction, simply set the switch to the **off** position when the blades are in the desired position.

Adjusting the Air Flow Direction Vertically

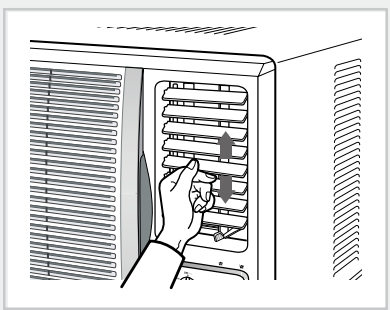

Again depending on the position of the unit in your room, you can adjust the orientation of the outer air flow blades on the right-hand side of the unit.

RECOMMENDATION

When...	Adjust the blades to face...
Cooling	Upwards.

Adjust the air flow blades to the desired position, by pushing them upwards or downwards.

➢ If you orient the air flow blades downwards and the unit operates in Cool mode for long periods of time, dew may:

- From on the surface of the blades
- Drip from the blades

DB98-28379A.indd 8 2010-03-16 8:00:37

Operating Recommendation

Here is a recommendations that you should follow when using your air conditioner.

Topic	Recommendation
Power failure	If a power failure occurs when the air conditioner is operating, the unit is switched off. When the power returns, the air conditioner starts up again automatically.

Temperature and Humidity Ranges

The following table indicates the temperature and humidity ranges within which the air conditioner can be used .

Mode	Indoor Temperature	Outdoor Temperature	Indoor Humidity
Cooling	21°C to 32°C approx.	21°C to 54°C approx.	80% or less

If the air conditioner is used at...	Then...
Higher temperature	The automatic protection feature may be triggered and the air conditioner stopped.
Lower temperature	A water leakage or some other malfunction may happen if the heat exchanger freezes.
Higher humidity levels	Water way condense on and drip from the surface of the unit if it is used for long periods.

DB98-28379A.indd 9 2010-03-16 8:00:37

Cleaning Your Air Conditioner

Be sure to clean the air filter periodically two weeks to maintain the air conditioner in the best condition for a long period of time.

IMPORTANT ***When cleaning the air conditioner, turn it off and pull out the power plug.***

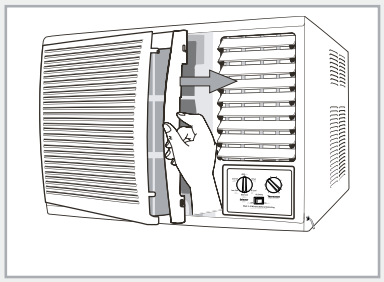

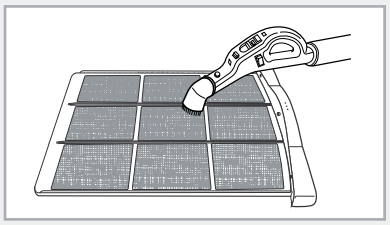

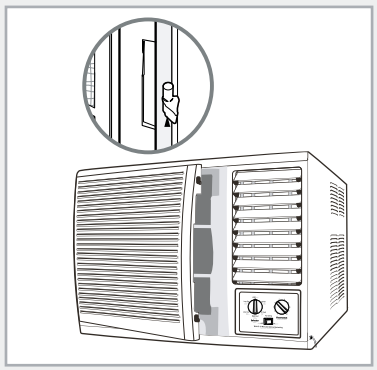

1	Hold the air filter handle, slightly pull it to the left side and open the front grille. ➢ The removal of the front grille makes it easier to clean the air conditioner. Open the grille as much as possible.
2	Pull the air filter to the right side.
3	Remove all dust on the air filter with a vacuum cleaner or brush.
4	When you have finished, insert the air filter back into its original position.
5	Wipe the surface of the unit with a neutral detergent and then wipe it again with dry cloth. (Be sure not to use benzene, solvent or other chemical products.)

➢

If you...	Then...
Will not be using the air conditioner for a long period of time	◆ Set the fan going for three to four hours to dry the inside of the air conditioner thoroughly. ◆ Switch the air conditioner off and unplug it from the wall socket. ◆ Clean the filter and outer surfaces.
Have not used the air conditioner for a long period of time	Set the fan going for a few hours to dry the inside of the air conditioner thoroughly.

DB98-28379A.indd 10 2010-03-16 8:00:39

Solving Common Problems

Before contacting the after-sales service,perform the following simple checks.
They may save you the time and expense of an unnecessary service call.

Problem	Explanation/Solution
The air conditioner does not operate at all	◆ Check that the circuit breaker used for the air conditioner has not been triggered. ◆ Check that the power cable is plugged into a wall socket and the socket is switched on, if necessary. ◆ Check that the correct operating mode has been selected (cooling or airing).
The air conditioner does not cool	◆ Check that the correct operating mode has been selected. ◆ The room temperature may be too low. ◆ Dust may be blocking the air filter; refer to page 10 cleaning instructions. ◆ Check that there is no obstacle blocking the air flow into or out of the unit.
The air flow direction does not change when you set the air flow blade swing switch to the on position	◆ Check that the air conditioner has been switched on; if necessary, turn the operating mode selection dial.
Odours are permeated in the room during air conditioning	◆ Air the room.

DB98-28379A.indd 11 2010-03-16 8:00:39

Method of Installation

Before installation, be sure to check the installation area for the air conditioner, and installation method of the drain hose.

Checkpoints prior to installation

1 Check the cabinet and front grille of the unit for any harmful defects such as scratches.

2 Be sure to check the power supply.
- Refer to the specifications on the label attached to the unit.

Installation Conditions

1 As the unit is heavy, the wall or window of the installation area should have sufficient strength and durability for operation of the air conditioner, and for prevention of any vibration or noise.
If it is weak, reinforcement work should be performed separately.

2 It is advisable to install the air conditioner in the north or west side to prevent the effect of direct sunlight.
When installing it in the south or east side due to unavoidable circumstances, it is advisable to install the sunshade to prevent the direct sunlight.
In this case, take care not to cause any hindrance to the flow of outside air.

3 When installing the air conditioner, be sure to obtain sufficient space on the rear side of the unit for smooth flow of air.
When operating the air conditioner in closed areas such as inner building with cooling operation, and result in trouble with the unit.
See the illustration below.

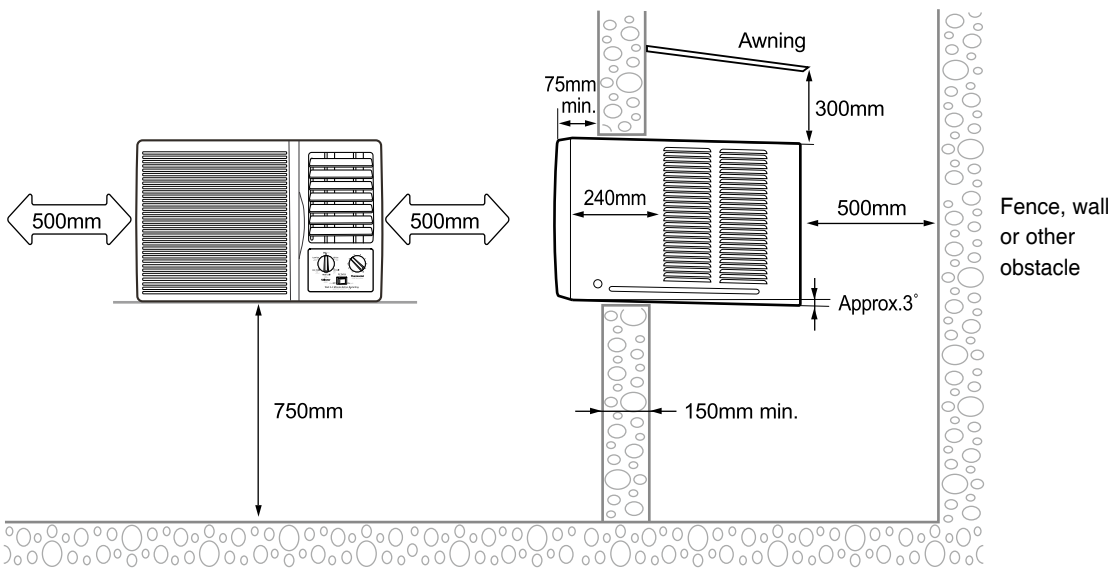

◆ If the wall is greater than 150mm thick, cut the wall back on a 45° angle if possible.

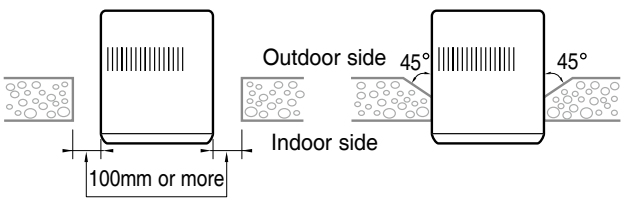

DB98-28379A.indd 12 2010-03-16 8:00:40

Method of Installation(Cont.)

Installation of the Drain Tube

Fix the drain tube as shown in the figure.

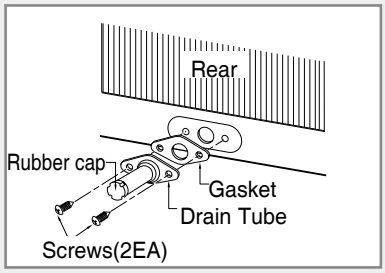

If the air conditioner has accessory seal ,please install the seal as shown in the figure

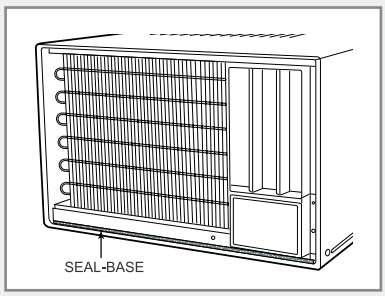

Installation of the accessory seal

Seal Base (T10 , W 25mm , L 660mm Qty-1)

MODEL			AWT18W(Y)1A				AWT18W1B			
STANDARD			ISO		SASO		ISO		SASO	
CAPACITY	COOL		18000BTU/h		3650Kcal/h		18000BTU/h		3654Kcal/h	
	HEAT		-		-		-		-	
SOURCE			220V~,60Hz							
CURRENT	COOL		9.5A		11.0A		9.3A		11.0A	
	HEAT		-		-		-		-	
POWER INPUT	COOL		2050W		2400W		2050W		2400W	
	HEAT		-		-		-		-	
REFRIGERANT	KIND		R22				R22			
	QUANTITY		800g				800g			
TEMPERATURE	INDOOR	DB(C/H)	27°C	-	29°C	-	27°C	-	29°C	-
		WB(C/H)	19°C	-	19°C	-	19°C	-	19°C	-
	OUTDOOR	DB(C/H)	35°C	-	46°C	-	35°C	-	46°C	-
		WB(C/H)	24°C	-	24°C	-	24°C	-	24°C	-
WEIGHT	NET		56.5Kg				50.5Kg			
	CROSS		62Kg				56Kg			

MODEL			AWT24W(Y)1A				AWT24W1B			
STANDARD			ISO		SASO		ISO		SASO	
CAPACITY	COOL		24000BTU/h		4800Kcal/h		22000BTU/h		4788Kcal/h	
	HEAT		-		-		-		-	
SOURCE			220V~,60Hz							
CURRENT	COOL		11.8A		14.0A		11.8A		14.5A	
	HEAT		-		-		-		-	
POWER INPUT	COOL		2550W		2880W		2550W		3010W	
	HEAT		-		-		-		-	
REFRIGERANT	KIND		R22				R22			
	QUANTITY		900g				750g			
TEMPERATURE	INDOOR	DB(C/H)	27°C	-	29°C	-	27°C	-	29°C	-
		WB(C/H)	19°C	-	19°C	-	19°C	-	19°C	-
	OUTDOOR	DB(C/H)	35°C	-	46°C	-	35°C	-	46°C	-
		WB(C/H)	24°C	-	24°C	-	24°C	-	24°C	-
WEIGHT	NET		61.1Kg				55.2Kg			
	CROSS		66.6Kg				60.7Kg			

The ISO means T1 condition,SASO means T3 condition.

DB98-28379A.indd 13 2010-03-16 8:00:41

QUESTIONS OR COMMENTS?

COUNTRY	CALL	OR VISIT US ONLINE AT
SOUTH AFRICA	0860-SAMSUNG(726-7864)	www.samsung.com
U.A.E	800-SAMSUNG (726-7864)	www.samsung.com
Bahrain	8000-4726	
Jordan	800-22273	

USER'S MANUAL

AWT18Y1 Series
AWT18W1 Series
AWT24Y1 Series
AWT24W1 Series

Window-type Room Air Conditioner (Cooling)

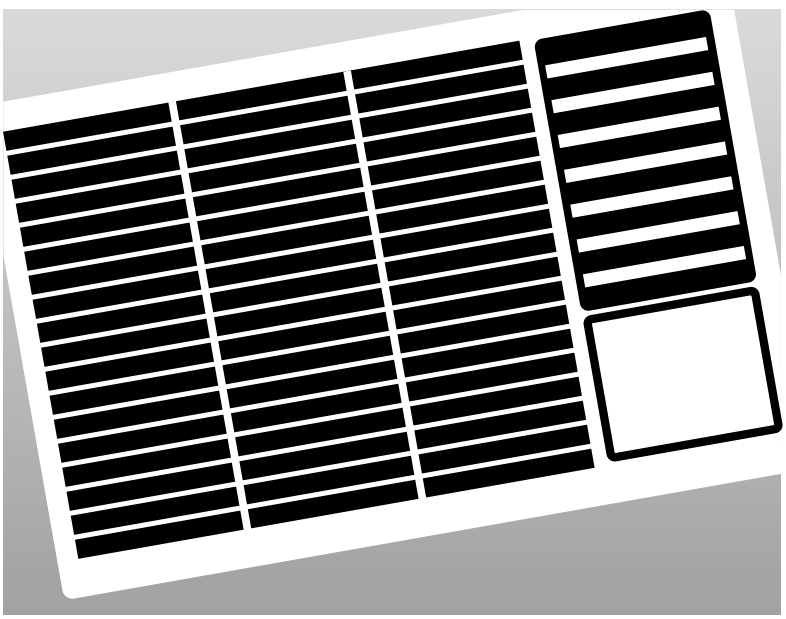

ⒺⒶ DB98-28379A(4)

DB98-28379A.indd 15 2010-03-16 8:00:41